


## THE ROLLER CONE

For improved elastic performance, we recommend fitting the optional Drennan Roller Cone inside a Side Pull Kit. Its precision-engineered wheel helps the elastic to glide in and out smoothly with far less friction. This prolongs the life of your elastic and makes playing fish even easier.

When inserted correctly it fits perfectly against the inside of the Side Pull Slot and cannot travel further up the section. This also ensures the wheel is perfectly aligned with the middle of the Side Pull Slot.

There are two sizes of Roller Cone; a standard size for Carp Top 2 Kits and a smaller version for Double 2 Kits.

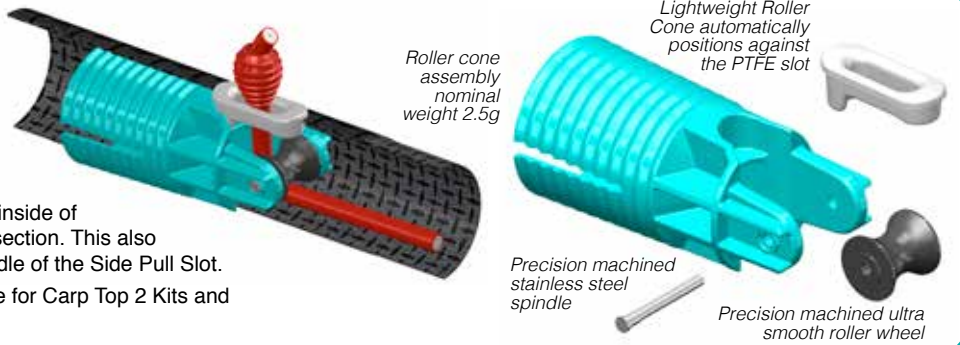

## SIDE PULL SLOTS


Each Drennan Carp Top 2 Kit and Double 2 Kit is factory fitted with a special Side Pull Slot made from a super-slick PTFE material. This elongated slot works better than a simple, round hole as it softens the angle of pull. Once elasticated correctly, the top kit makes a very effective 'side puller' and enables you to easily control the amount of elastic a hooked fish can pull out.



**1** Attach your chosen connector to one end of the pole elastic.



**2A** Thread the other end of the elastic all the way through the No1 section. With a new kit, you should be able to drop the elastic straight down fairly easily.

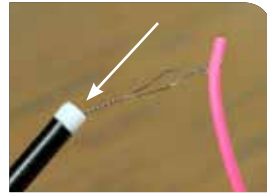


**2B** Alternatively, use a diamond-eye elastic threader to help pull the elastic completely through.




**3** Continue to thread the end of the elastic through the No2 section until it is all the way through.



**4** Now thread the elastic around the wheel of the Roller Cone.

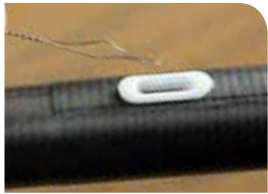


**5** Insert a diamond-eye elastic threader through the Side Pull Slot (You could potentially use stiff line as an alternative).

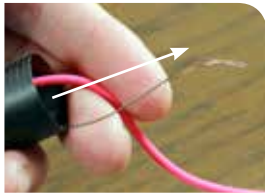

**6** Guide the elastic threader out of the base of the No2 section.



**7** Attach the end of the elastic to the threader, ensuring the Roller Cone is still also threaded.

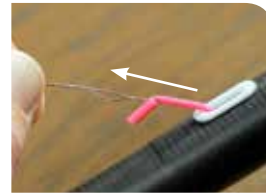

**8** Slowly pull the elastic back through the Side Pull Slot.



**9** Thread a Side Pull Bead onto the elastic. Again, either a diamond-eye elastic threader or stiff line can be used.




**10** Tie a simple overhand knot in the elastic, moisten and pull tight. Do not worry about correctly tensioning the elastic at this stage.



**11** You now need to correctly insert the Roller Cone into position.



**12** Using a bung extractor rod, slowly insert the Cone. Ensure the Roller's wheel is upright and the elastic is parallel and not twisted.

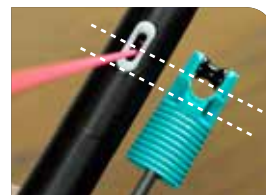

**13** Push the Cone all the way up until it fits against the Side Pull Slot. Aligned correctly, you should see the Roller's wheel directly in line with the Slot.



**14** Now correctly tension the elastic to your own requirements before tying another knot, moistening and pulling tight.



**15** Pull the bead up to the knot and trim the loose ends with scissors.



**16** The knot can be pulled inside the Side Pull Bead for neatness.



**17** The top kit is now fully elasticated and ready to fish with!

## ELASTIC TENSIONING

Before fishing, we recommend you stretch your pole elastic completely two or three times and re-tension if necessary for optimum performance. The elastic should ideally be under slight tension inside the pole, without any droop.